

Hopefully Helpful Hints and Protocol - PIPELINE Bottoming-out Kit

PIPELINE BOTTOMING-OUT KIT is sufficient to make up 50 litres of bottoming-out solution and is not restricted to PIPELINE users. Use to "bottom-out" old or neglected dispense systems or use once or twice a year to bring your dispense system back to scratch or to verify your existing cleaning techniques. Chlorine-free. Contains no caustic soda. A sensationally good and effective cleaner enabling total biofilm removal and dispense system sterilisation.



A dispense system does not have to be neglected or badly maintained to require bottoming out. Employing poorly performing chemical cleaners or unsophisticated and unmodified chlorinated caustic soda-based products or applying chemicals incorrectly can all lead to a build-up of stubborn and tenacious organic and inorganic biofilms, some of which can manifest themselves in obvious and visual form (above). These can be but the proverbial tip of the iceberg.



Although

PIPELINE Gold

is the most sophisticated, the most advanced and the best Conventional Beer Line Cleaner there has ever been PIPELINE Bottoming-out Kit is even better! Containing no caustic soda and no chlorine, this product is well ahead of its time. We have incorporated some of the most technically advanced additives on the market - some of which have never yet been used for this application - to produce a product of stunning, yet safe and non-aggressive, cleaning power.



Safety Note: PIPELINE Gold definitely has the "Ouch" factor. It is perfect safe if used correctly - safer than most chlorinated caustic products - but it is very well worthwhile dressing up for. Wear gloves and goggles and read the label before use. PIPELINE Bottoming-out Kit is not an MFI flat-pack!




So, to "Bottoming-out" and some (HOPEFULLY) HELPFUL HINTS:

- A Prepare cleaning solution. One container for a 25 litres cleaning vessel, two for 40 litres or more.
- B Top up c.v. to capacity with water.
- C Connect up to cleaning ring main.
- D Leave the remote cooler switched off during cleaning.
- E Bleed the fob detector - thoroughly.



B-O Kit HHH & Protocol

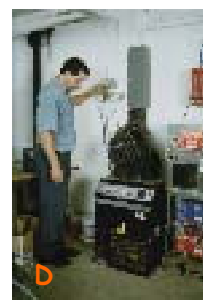

Hopefully Helpful Hints and Protocol - PIPELINE Bottoming-out Kit



F Pull off until golden fluid emerges.

PIPELINE Gold is Gold in Bars.



G Wait 10 minutes.



H Pull off discoloured fluid until golden fluid emerges or simply pull off 1 litre of cleaning fluid.



I Wait 10 minutes.



J Pull off 1 litre of cleaning fluid and examine for alien objects. (However, allow for the fact that the fluid is naturally cloudy.)

What are we looking for here, Martin? Floaters; right. Floaters?



And here's the "Wow" factor; what bottoming-out is about. "What on Earth is that?" "Where did that lot come from?" And, "I thought my lines were clean!" "That's amazing!" etc. Floaters; very satisfying.



K Wait 10 minutes.



L Pull off 1 litre of cleaning fluid.



M Wait 10 minutes.



N Pull off 15 litres of water per line - that's one-and-a-half PIPELINE bucketsful.



O Inspect for floaters in the rinse water; it should be absolutely clear.

P Reconnect the beer.
Q Switch the cooler back on.
R Inspect the dispense product for clarity.



S And then what better quality test! - seriously. Sight, smell & taste; you are equipped with the best testing equipment there is; get to know your products.



As for the follow-up cleaning - your regular weekly or fortnightly line cleaning - well, the choice is yours. In the Chemisphere UK stable we have the widest possible choice of top-quality products, including PIPELINE AUTO, if you have been manually bottoming-out your automatically cleaned dispense system. Contact us for advice: FREEPHONE 0800 018 8062



CHEMISPHERE UK Ltd

tel: 0800 018 8062 fax: 0800 597 7449 e-Mail: ContactUs@ChemisphereUK.co.uk